#### **Product Details**

#### PRODUCT IMAGE





### Notes:

- Recommend energy alkaline batteries. Please make sure the battery polarity (+, -) in the right place when installing the batteries.
- Do not leave the product on uneven or unstable surfaces, to prevent damage caused by falling. Please be careful when handling the Outdoor Parts to prevent bump.
- Do not violent shock, vibration, of throw the peephole viewer, do not press hard on the LCD display area, beat or scratch, otherwise it will cause damage to the LCD panel ro leakage.
- Do not place the product on hige-temperature, hige humidity or a lot of dust, salt spray and other harsh environments, do not be exposed, do not be exposed to rain, which may result in maffunction.
- Please take ultra-care to the Wire (FPC) when installig the indoor part, do not pull too hard to prevent the wire (FPC) breaking.

# **Function Setting Instruction:**

- Manually delete the pictures

  Keep pressing " " " button under viewing picture mode, it will enter " " into the manually delete
  the pictures mode. Press " " to select "YES" to delete; if you don't want to delete the pictures, press
  " " to select "NO" to return to the monitoring mode.
- Note: It will enter into the time/date setting after power off and power on again every time.

# **Product features and specifications:**

Easy and safety to operation; touch and show big image, peephole will not become dark, can't know people are at home or not

HD image: clear LCD screen, vivid for image, better than traditional one

Easy To Install: simple for installation, even the elders can install in five minutes

Better Recognizable: display smooth and clear images, won't distorted images

Wide Applicable: children, the elderly, poor eyesight, can be simple clearly see the people out of the door

Electricity sacings: use 3 AAA batteries, special power management technology (about 2000 times switch watch)

Visitor visiting: Press the Doorbell button, meanwhile playing the ring

Lens 68 degrees can perspective

Weight: About 120 g


u.a megapixeis

Host Size: 13.5 (W) x 8.4 (H) x 2.6 (D) cm


Chird Size: 6.0 (W) x 6.0 (H) x 1.4 (D) cm

### Installation Instructions


### COMPOSITE IMAGE

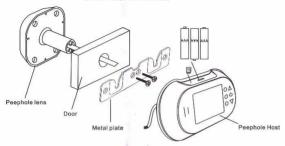

**EXPLODED VIEW** 

 

 
Insert Peephole lens through the hole on the door, the end with camera should be on the outside of the door, then use the screws to tighten the peephole lens and metal plate.




Insert the TF card, and close the battery cover.



 Open the battery cover, using 3 PCS 7AAA batteries in the battery slot of the peephole Host.



Buckle up the flat cables of the Peephole Lens and Peephole Host.

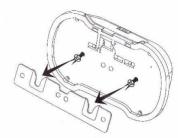

There are two screws at the back of the Peephole Host, then hang them to the right position on the metal plate.



6 Finished

## Guarantee

Item Name	Date of Production	Warranty Date	Cause of Failure
gital Door Viewer		1	

Note: 1. The warranty is one year, we will charge the repair cost if the warranty is expire 2. If the product is damaged by human being, and we will charge the repair cost.